

## ● ○ ○ ISTRUZIONI DI POSA PANNELLI 3D IN POLIURETANO



1 - Applicare la colla MS180 a strisce sul retro del pannello



2 - Dopo aver segnato una linea a livella posizionare i pannelli alla parete



3 - Fare una leggera pressione per far aderire meglio il pannello alla parete




4 - Segnare la misura da tagliare



5 - Tagliare poi alla misura occorrente con sega a mano



6 - Oppure con troncatrice elettrica

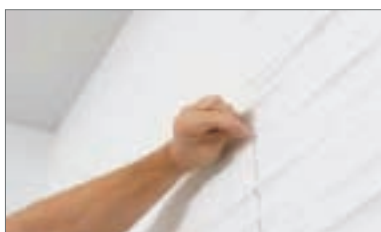

7 - Accostare quindi all'altro pannello



8 - Tinteggiare con idropitture lavabili

**Importante: essendo un rivestimento a pannelli, si possono creare nelle giunture delle piccole imperfezioni dovute alle pareti. Tenere presente che dopo la posa il giunto rimarrà lievemente visibile come propria caratteristica e quindi non come difetto.**

### Assembly instructions

- Apply the glue Ms180 strips on the back of the panels
- After scoring a level line position the wall panels
- Mark the measure to be cut
- Cut then to the extent necessary with a hand saw or power miter saw
- Pull then the other panel
- Be painted with washable paints

**You can be created in the joints of small imperfections for cause of the wall. It's characteristic and therefore not a fault.**